


Product Guide May 2024

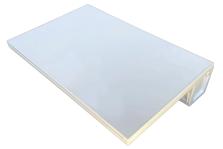

- PVC
 - Cuttable in the Field
 - Proven Product

ARG	Pool	Waterfal	IS


Back Port	White	Back Port	Clear	Bottom Port	White
Part Number	Description	Part Number	Description	Part Number	Description
WF1201AWH	WF 12 INCH 1 INCH LIP WHITE	WF1201ACL	WF 12 INCH 1 INCH LIP CLEAR	WF1201BWH	WF 12 INCH 1 INCH LIP WHITE
WF1206AWH	WF 12 INCH 6 INCH LIP WHITE	WF1206ACL	WF 12 INCH 6 INCH LIP CLEAR	WF1206BWH	WF 12 INCH 6 INCH LIP WHITE
WF1209AWH	WF 12 INCH 9 INCH LIP WHITE	WF1209ACL	WF 12 INCH 9 INCH LIP CLEAR	WF1212BWH	WF 12 INCH 12 INCH LIP WHITE
WF1212AWH	WF 12 INCH 12 INCH LIP WHITE	WF1212ACL	WF 12 INCH 12 INCH LIP CLEAR	WF1801BWH	WF 18 INCH 1 INCH LIP WHITE
WF1801AWH	WF 18 INCH 1 INCH LIP WHITE	WF1801ACL	WF 18 INCH 1 INCH LIP CLEAR	WF1806BWH	WF 18 INCH 6 INCH LIP WHITE
WF1806AWH	WF 18 INCH 6 INCH LIP WHITE	WF1806ACL	WF 18 INCH 6 INCH LIP CLEAR	WF1812BWH	WF 18 INCH 12 INCH LIP WHITE
WF1809AWH	WF 18 INCH 9 INCH LIP WHITE	WF1809ACL	WF 18 INCH 9 INCH LIP CLEAR	WF2401BWH	WF 24 INCH 1 INCH LIP WHITE
WF1812AWH	WF 18 INCH 12 INCH LIP WHITE	WF1812ACL	WF 18 INCH 12 INCH LIP CLEAR	WF2406BWH	WF 24 INCH 6 INCH LIP WHITE
WF2401AWH	WF 24 INCH 1 INCH LIP WHITE	WF2401ACL	WF 24 INCH 1 INCH LIP CLEAR	WF3601BWH	WF 36 INCH 1 INCH LIP WHITE
WF2406AWH	WF 24 INCH 6 INCH LIP WHITE	WF2406ACL	WF 24 INCH 6 INCH LIP CLEAR	WF3606BWH	WF 36 INCH 6 INCH LIP WHITE
WF2409AWH	WF 24 INCH 9 INCH LIP WHITE	WF2409ACL	WF 24 INCH 9 INCH LIP CLEAR	WF4801BWH	WF 48 INCH 1 INCH LIP WHITE
WF2412AWH	WF 24 INCH 12 INCH LIP WHITE	WF2412ACL	WF 24 INCH 12 INCH LIP CLEAR	WF4806BWH	WF 48 INCH 6 INCH LIP WHITE
WF3601AWH	WF 36 INCH 1 INCH LIP WHITE	WF3601ACL	WF 36 INCH 1 INCH LIP CLEAR	WF4812BWH	WF 48 INCH 12 INCH LIP WHITE
WF3606AWH	WF 36 INCH 6 INCH LIP WHITE	WF3606ACL	WF 36 INCH 6 INCH LIP CLEAR	WF6001BWH	WF 60 INCH 1 INCH LIP WHITE
WF3609AWH	WF 36 INCH 9 INCH LIP WHITE	WF3609ACL	WF 36 INCH 9 INCH LIP CLEAR	WF6006BWH	WF 60 INCH 6 INCH LIP WHITE
WF3612AWH	WF 36 INCH 12 INCH LIP WHITE	WF3612ACL	WF 36 INCH 12 INCH LIP CLEAR		
WF4801AWH	WF 48 INCH 1 INCH LIP WHITE	WF4801ACL	WF 48 INCH 1 INCH LIP CLEAR		
WF4806AWH	WF 48 INCH 6 INCH LIP WHITE	WF4806ACL	WF 48 INCH 6 INCH LIP CLEAR	Bottom Port	Clear
WF4809AWH	WF 48 INCH 9 INCH LIP WHITE	WF4809ACL	WF 48 INCH 9 INCH LIP CLEAR	Part Number	Description
WF4812AWH	WF 48 INCH 12 INCH LIP WHITE	WF4812ACL	WF 48 INCH 12 INCH LIP CLEAR	WF1201BCL	WF 12 INCH 1 INCH LIP CLEAR
WF6001AWH	WF 60 INCH 1 INCH LIP WHITE	WF6001ACL	WF 60 INCH 1 INCH LIP CLEAR	WF1801BCL	WF 18 INCH 1 INCH LIP CLEAR
WF6006AWH	WF 60 INCH 6 INCH LIP WHITE	WF6006ACL	WF 60 INCH 6 INCH LIP CLEAR	WF1806BCL	WF 18 INCH 6 INCH LIP CLEAR
WF6009AWH	WF 60 INCH 9 INCH LIP WHITE	WF6009ACL	WF 60 INCH 9 INCH LIP CLEAR	WF2401BCL	WF 24 INCH 1 INCH LIP CLEAR
WF6012AWH	WF 60 INCH 12 INCH LIP WHITE	WF6012ACL	WF 60 INCH 12 INCH LIP CLEAR	WF2406BCL	WF 24 INCH 6 INCH LIP CLEAR
WF7201AWH	WF 72 INCH 1 INCH LIP WHITE	WF7201ACL	WF 72 INCH 1 INCH LIP CLEAR	WF3606BCL	WF 36 INCH 6 INCH LIP CLEAR
WF7206AWH	WF 72 INCH 6 INCH LIP WHITE	WF7206ACL	WF 72 INCH 6 INCH LIP CLEAR		
WF8401AWH	WF 84 INCH 1 INCH LIP WHITE	WF8401ACL	WF 84 INCH 1 INCH LIP CLEAR		
WF8406AWH	WF 84 INCH 6 INCH LIP WHITE	WF8406ACL	WF 84 INCH 6 INCH LIP CLEAR		
WF9601AWH	WF 96 INCH 1 INCH LIP WHITE				
WF9606AWH	WF 96 INCH 6 INCH LIP WHITE				

Back Port	Gray	Back Port	Tan
Part Number	Description	Part Number	Description
WF1201AGR	WF 12 INCH 1 INCH LIP GRAY	WF1201ATN	WF 12 INCH 1 INCH LIP TAN
WF1206AGR	WF 12 INCH 6 INCH LIP GRAY	WF1206ATN	WF 12 INCH 6 INCH LIP TAN
WF1209AGR	WF 12 INCH 9 INCH LIP GRAY	WF1209ATN	WF 12 INCH 9 INCH LIP TAN
WF1212AGR	WF 12 INCH 12 INCH LIP GRAY	WF1212ATN	WF 12 INCH 12 INCH LIP TAN
WF1801AGR	WF 18 INCH 1 INCH LIP GRAY	WF1801ATN	WF 18 INCH 1 INCH LIP TAN
WF1806AGR	WF 18 INCH 6 INCH LIP GRAY	WF1806ATN	WF 18 INCH 6 INCH LIP TAN
WF1809AGR	WF 18 INCH 9 INCH LIP GRAY	WF1809ATN	WF 18 INCH 9 INCH LIP TAN
WF1812AGR	WF 18 INCH 12 INCH LIP GRAY	WF1812ATN	WF 18 INCH 12 INCH LIP TAN
WF2401AGR	WF 24 INCH 1 INCH LIP GRAY	WF2401ATN	WF 24 INCH 1 INCH LIP TAN
WF2406AGR	WF 24 INCH 6 INCH LIP GRAY	WF2406ATN	WF 24 INCH 6 INCH LIP TAN
WF2409AGR	WF 24 INCH 9 INCH LIP GRAY	WF2409ATN	WF 24 INCH 9 INCH LIP TAN
WF2412AGR	WF 24 INCH 12 INCH LIP GRAY	WF2412ATN	WF 24 INCH 12 INCH LIP TAN
WF3601AGR	WF 36 INCH 1 INCH LIP GRAY	WF3601ATN	WF 36 INCH 1 INCH LIP TAN
WF3606AGR	WF 36 INCH 6 INCH LIP GRAY	WF3606ATN	WF 36 INCH 6 INCH LIP TAN
WF3609AGR	WF 36 INCH 9 INCH LIP GRAY	WF3609ATN	WF 36 INCH 9 INCH LIP TAN
WF3612AGR	WF 36 INCH 12 INCH LIP GRAY	WF3612ATN	WF 36 INCH 12 INCH LIP TAN
WF4801AGR	WF 48 INCH 1 INCH LIP GRAY	WF4801ATN	WF 48 INCH 1 INCH LIP TAN
WF4806AGR	WF 48 INCH 6 INCH LIP GRAY	WF4806ATN	WF 48 INCH 6 INCH LIP TAN
WF4809AGR	WF 48 INCH 9 INCH LIP GRAY	WF4809ATN	WF 48 INCH 9 INCH LIP TAN
WF4812AGR	WF 48 INCH 12 INCH LIP GRAY	WF4812ATN	WF 48 INCH 12 INCH LIP TAN
WF6001AGR	WF 60 INCH 1 INCH LIP GRAY	WF6001ATN	WF 60 INCH 1 INCH LIP TAN
WF6006AGR	WF 60 INCH 6 INCH LIP GRAY	WF6006ATN	WF 60 INCH 6 INCH LIP TAN



Pool Waterfall Tech Guide

ARG Pool Waterfalls Have Been Produced For Almost 20 Years
Ports (Inlets) are 1-1/2 in Spigot - PVC Material - One Gallon Per Minute Per Inch

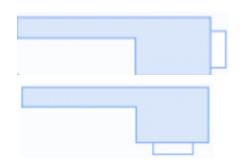

Back Port

Bottom Port


Because ARG Waterfalls Are PVC, They Are Easier to Cut In The Field vs Competitors.




12 in, 18 in, 24 in & 36 in are One Port 48 in, 60 in, 72 in & 84 in are Two Ports 96 in are Four Ports


Suggested Pipe Configuration : 2 Way Valve

One Port - In the middle of the Waterfall

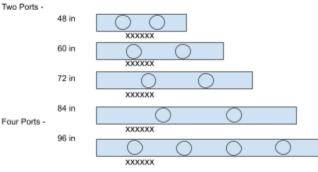


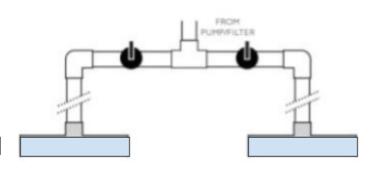

Up to 36 Inch Long

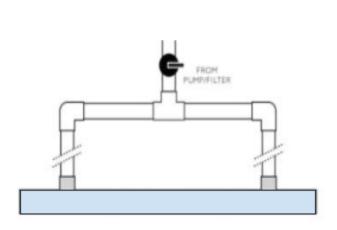

48 Inch - 84 Inch Long

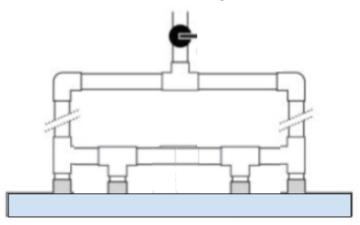


96 Inch Long



Waterfall Measurements

Body

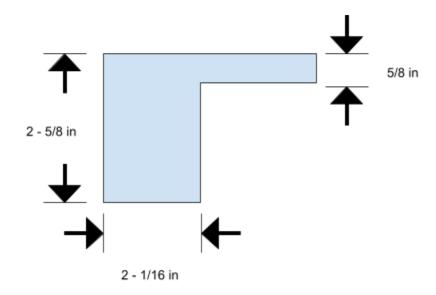

Lip Width 1 Inch = 1 - 1/16" 6 Inch = 6"

Lip Length

Waterfall	Lip Length (inch)
12 in	12.7 inch
18 in	18.6 inch
24 in	24.45 inch
36 in	36.2 inch
48 in	48 inch
60 in	59.85 inch
72 in	71.54 inch
84 in	83.35 inch
96 in	95.24 inch

^{*}Plus or Minus .33 inches



Pool Waterfall Tech Guide



Α

Must use filtered water (water must go through a filter before going to the waterfall). A rock trap (A) is provided with each waterfall. This is only to collect the debris from building the pool, not for ongoing maintenance.


A metal tool (B) is provided for when cutting waterfalls in the field. The supports that keep the lip open must be broken off one inch from the front of the lip. The waterfall tool can also be used to clean the opening of the lip.



We recommend using at least one GPM per inch of waterfall. Using less may cause the water to wet the wall, affecting the appearance of the waterfall.

As the water sheet comes out of the waterfall, it will close in, looking like a V pattern.

To minimize this, try more GPM. The higher a waterfall is installed, the more pronounced the V shape will be.

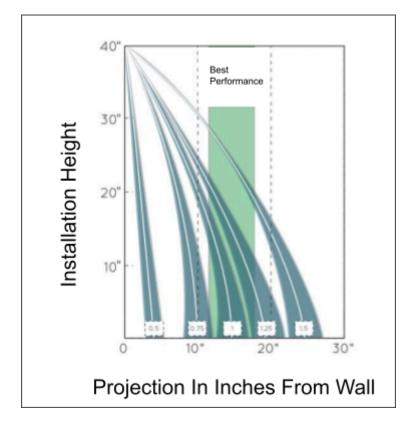

12" & 18" Waterfalls

The flume on these sizes of waterfall is very narrow. For a more traditional appearance, we recommend installing the 12" at max height of 18" (8" projection) and 18" at max height of 24" (9" projection).

Wet Wall Effect

Low flow installations may cause the wall surface to become wet when the waterfall is flowing. For a dry wall effect, it is best to operate at the higher end of the recommended GPM range. At the low end of the recommended GPM range the waterfall flume will still appear good, but you may be in the potential "drip zone." (Example: For a dry wLL ON A 36" waterfall, 36 GPM or more will give the best results.)

Extended Heights and Projection

For a more dramatic effect, it is possible to achieve increased projection and heights above 40" by increasing the gallons per minute. Results outside of tested parameters may vary.

Test Conditions

Testing was performed in our factory under optimum conditions. Environmental factors such as weather, construction method, hydraulic variations, and different equipment can alter appearance.




Waterfall Custom Cut Order Form

Complete Form and email to CS@argpool.com


Builder Name	Date
Address	
Contact	Phone
Email	Distributor

ARG Waterfall Part Number _____ Quantity _____ Back or Bottom Inlet

Type of Cut (Circle Number):



For Numbers 1 and 2, list the radius desired in feet

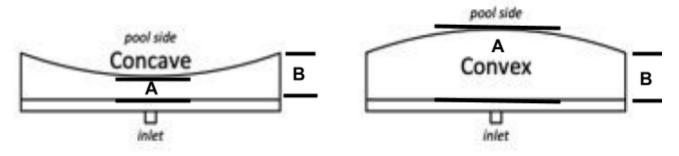

List the length of the lip to the body on the ends (B) _____ center (A)_____

For Number 3, a template must be sent to ARG at:

ARG

1406 Commerce Dr, Stockbridge, GA 30281

Please write your name and email on the template.

Note: Custom Cut Waterfalls cannot be returned. A PO Number from the distributor is required before a custom cut can be made. Filtered water must be used on waterfalls.

There is an upcharge for custom cuts. Please check with your distributor for details.

Any questions please email cs@argpool.com.

\$40 Charge On Custom Cut 12 in To 48 in Part Number: WFCC40 \$70 Charge On Custom Cut 60 in + 72 in WFCC70 \$100 Charge On 84 in + 96 in WFCC100


ARG Deck Jet



Assembly Part Number DJ001
Parts
Single Stream Nozzle DJN01
Dual Stream Nozzle DJN02
Round Cap
Gray DJRCGR
Tan DJRCTN
White DJRCWT
Square Cap
Tan DJSCTN
Deck Jet Plug
DJP01

Gunite Spa Jets



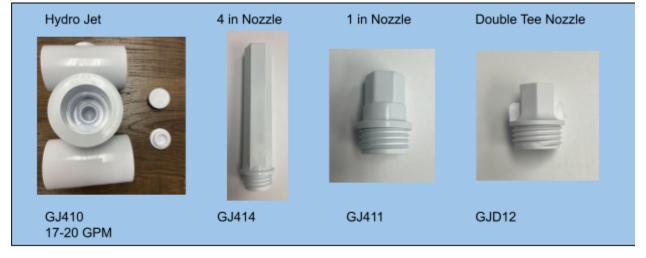

Deluxe Gunite Spa Jet Assembly



Spa Massage Hydro Jet Black SKHJBK Gray SKHJGR White SKHJWH Pipe Not Included 17-20 GPM



Spa Massage Hydro Jet Black



Spa Massage Double Tee Jet Black SKDJBK Gray SKDJGR White SKDJWH Pipe Not Included 13-17 GPM



Spa Massage Double Tee Jet Gray

Deluxe Gunite Spa Jet Fitting

Stainless Steel Trim - Rotates For Therapy Massage 1-1/2 in FPT Fits Inside Most Return Fittings



Black SK115MBK



Gray SK115MGR



White SK115MWH



Clean Pro

Inline Chlorine/Bromine Tablet Feeder



Automatic Chlorinator RESIDUAL SANITIZER SYSTEM

Specifically Designed For Variable Speed Pump Applications

- Accepts 1 Inch or 3 Inch Chlorine or Bromine Tablets.
- Holds Eleven 3 Inch Tablets or Five Pounds of 1 inch Tablets.
- Air Bleed for Better Performance.
- Large Body For Easier Service.
- Clear Feeder Tube Indicates When Unit Is In Operation.
- 2 Inch And 1 ½ Inch Unions Included.
- Inserts In Body Are Specifically Designed To Work With Variable Speed Pumps. They May Be Removed When Using With A Single Speed Pump. (Or When Less Chlorination Is Desired).
- Part Number CIV00.

Email cs@argpool.com for more information.



Clean Pro

Inline Chlorine/Bromine Tablet Feeder



Manual Air Relief Plug Allows the User to Bleed the Air for Better Performance.

Chlorinators Sometimes Suffer from "Air Lock". Better Designed Chlorinators Have This Air Relief Plug Feature.





Left - Clear Feeder Tube Allows the User to See That The Unit is Operating. Clear Feeder Tube is Easily Replaceable. Clear Feeder Tube Feeds Chlorinator Body at The Top for More Efficient Performance.

Right - Chlorinator Dial Allows User to Set The Chlorinator for Desired Amount.

Inserts In Body Are Specifically Designed To Work With Variable Speed Pumps. They May Be Removed When Using With A Single Speed Pump. (Or When Less Chlorination Is Desired).



Fittings

Water Stop Adapter 1 1/2 in



Clear WSA015CL

Water Stop Adapter 2 in



Clear WSA002CL

*1 in Eye With 3/4 in Reducer

Flush Mount Return Fitting*



Black FR00BK White WSA015WH White WSA002WH Dark Gray FR00DG Gray FR00GR White FR00WH

1-1/2 in Insider x 1 in Socket

Aussie 1 1/2 in Insider Fitting



Black IA015BK Dark Gray IA015DG Gray IA015GR White IA015WH

2 in Insider Fitting

Black IF002BK

Gray IF002GR

White IF002WH

Dark Gray IF002DG

Wall Fitting 1-1/2 in Socket Gunite



Black GF015BK Dark Gray GF015DG Gray GF015GR White GF015WH

Wall Fitting 1-1/2 in FPT x 2 in MPT Available 7/28




White WFT002WH

Eyeball Fitting 1-1/2 in MPT x 3/4 in Eye Available 7/28



Black EFM015DBK Dark Gray EFM015DDG Gray EFM015DGR White EFM015DWH

Filter Manifolds

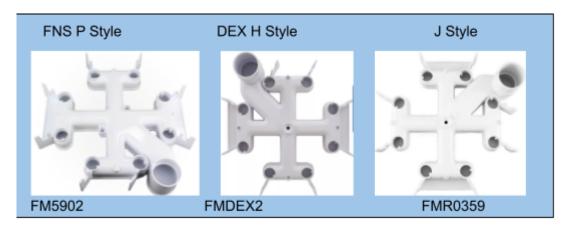

Baskets Heavy-Duty

Better Than The OEM



Skimmer Basket Extended Handle Only BHD069



Air Reliefs




Air Reliefs





Ball Valves Socket x Socket

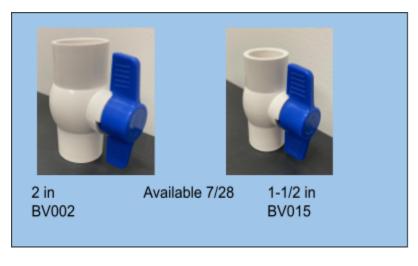



1-1/2 in All Purpose Plug APP015 Available 7/28



Barracuda Style Diaphragm With Ring BSDIA

Unions





Advanced Recreational Goods, Inc. 1406 Commerce Dr., Stockbridge, GA 30281 PH (678) 837-7479 www.argpool.com cs@argpool.com